

# Installation Instruction

## Universal Expansion Joint EH-800H /EH-810H




### Type 1: Level Piping

- ♠ Setting one Pipe Guide Anchor at both ends of universal expansion joint. The distance from the expansion joint to Pipe Guide Anchor is  $4 \times DN$ .
- ♠ Setting a fixed anchor in the middle of expansion joint's pipeline
- ♠ It is available to install from top as the top and supporting strong enough.

Installing method is the same as from bottom

Note: The tie rods can NOT be adjusted or removed before or after installing.

The Nuts on the tie rods can NOT be adjusted nor removed after installing.

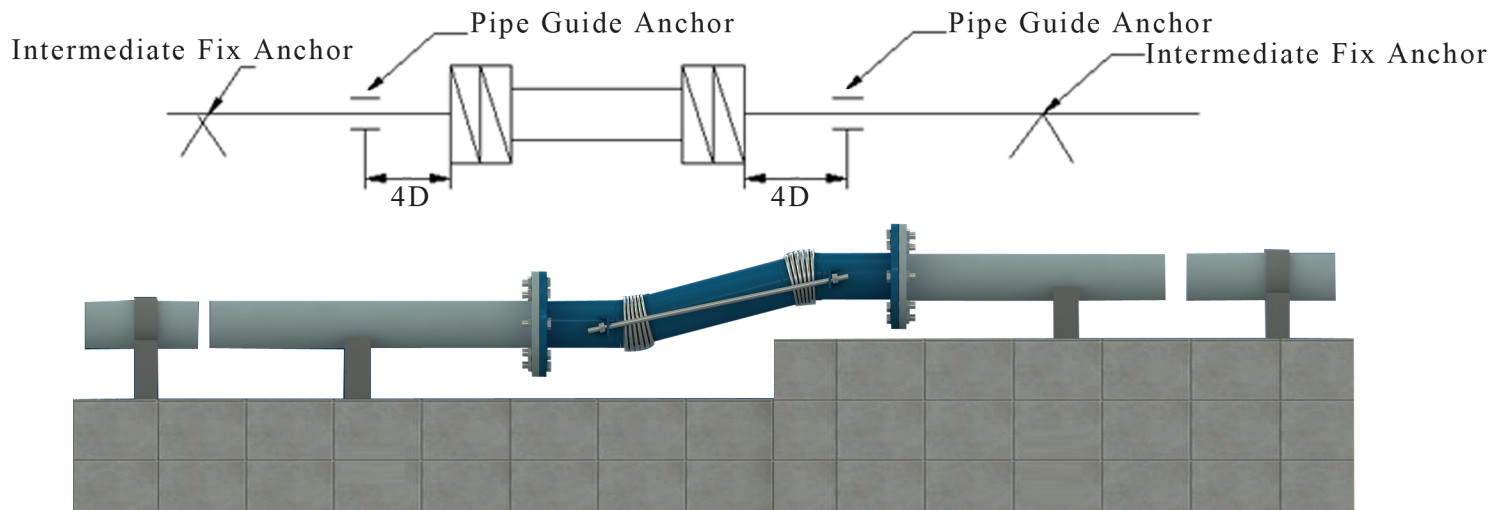

### Type 2: Z or L Piping

- ♠ Setting one Pipe Guide Anchor at both ends of universal expansion joint. The distance from the first level surface Pipe Guide Anchor to expansion joint is  $4 \times DN$ . The distance from the first Pipe Guide Anchor to the second one at the lever surface is  $14 \times DN$ . The max distance of other pipe guide anchor is  $L_{max}$ . ( $L_{max}$  ref. Manufacturer.)

Note: The tie rods can NOT be adjusted or removed before or after installing.

